

June 3, 2004

Procedure for changing preset speeds on Safronics C-10 drive with Klaisler Software (40004)


Drive should be stopped, with no alarms present.


Set drive to enable changing parameter settings:

- o *Enter Program Mode:*

Press the  button.

- o *Get to the Operate Settings:*

Press the  button 2 times, until SN-01 shows.


Press the  button 2 times, to get to SN-03.


- o *Change the setting:*

Press the  button to get to the set value.

Press the  button to change from 01 (setting invalid) to 00 (setting valid).


Press the  button to set the new value.


Press the  button to get back to the parameter list.

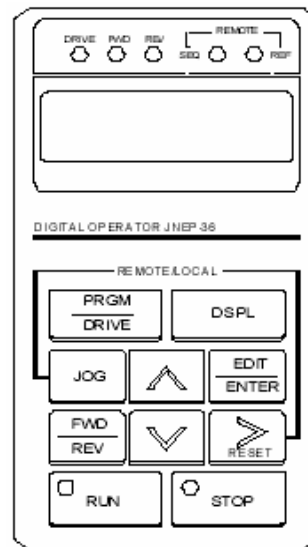





Change the preset speed:


Drive should still be in program mode

Press the  button to get to the AN parameters.


Press the  button to get to AN-16 for the Main Speed, or AN-17 for the High Speed.

Press the  button to get to the set value.


Press the  or  button to change the value. The  button will move the cursor to another digit.

Press the  button to set the new value.

Disable program changes:


Press the  button to get to the SN parameters.

Press the  or  button to get to SN-03.

Press the  button to get to the set value.

Press the  button to change from 00 (setting valid) to 01 (setting invalid).

Press the  button to set the new value.

Press the  button to get back to the parameter list.

- o *Exit Program Mode:*

Press the  button.

Control Sales, Inc. ♦ 306 Main St. ♦ Beech Grove, IN 46107

TEL 317-786-2272 ♦ FAX 317-786-0022 ♦ www.control-sales.com ♦ sales@control-sales.com

Specializing in Motors and Controls - Since 1976